

| | | | | |
|--|-----------|---|---|------|
| Photo Clam Geared Head | | | | |
| Geared Head | PCMF | MultiFlex (specialized head for macro & architecture photograph) - Requires plate | | 8760 |
| Photo Clam Gimbal-type Tripod Head | | | | |
| Gimbal-type tripod head | PCOrion | Orion Tilt Head (specialized head for all telephoto lenses & camera combinations) | | 3936 |
| Photo Clam Ball Heads | | | | |
| Ball Head | PC-30N | PC-30N - Black (without bubble level & friction screw) | x | 1121 |
| Ball Head | PC-30N | PC-30N - Red / Gold / Blue (without bubble level & friction screw) | | 1175 |
| Ball Head | PC-30NS | PC-30NS - Black (with bubble level but no friction screw) | | 1337 |
| Ball Head | PC-30NS | PC-30NS - Red / Gold / Blue (with bubble level but no friction screw) | | 1404 |
| Ball Head | PC-33NS | PC-33NS - Black (with bubble level) | x | 1593 |
| Ball Head | PC-33NS | PC-33NS - Red / Gold / Blue (with bubble level) | | 1674 |
| Ball Head | PC-36NS | PC-36NS - Black (with bubble level) | x | 1904 |
| Ball Head | PC-36NS | PC-36NS - Red (with bubble level) | | 1998 |
| Ball Head | PC-40NS | PC-40NS - Black (with bubble level) | x | 2282 |
| Ball Head | PC-40NS | PC-40NS - Red (with bubble level) | | 2390 |
| Ball Head | PC-44NS | PC-44NS - Black (with bubble level) | x | 2727 |
| Ball Head | PC-44NS | PC-44NS - Red (with bubble level) | | 2862 |
| Ball Head | PC-48N | PC-48N - Black (without bubble level) | | 2997 |
| Ball Head | PC-48NS | PC-48NS - Black (with bubble level) | x | 3267 |
| Ball Head | PC-54N | PC-54N - Black (without bubble level) | | 3429 |
| Ball Head | PC-54NS | PC-54NS - Black (with bubble level) | x | 3632 |
| Ball Head | PC-74NS | PC-74NS - Black (with bubble level) | x | 4347 |
| Ball Head | PCPGIIQR | Pro Gold II QR (screw-knob style clamp) | x | 2619 |
| Ball Head | PCPGIIEQR | Pro Gold Easy QR (lever-release clamp) | | 2980 |
| Ball Head | PCPGIIPQR | Pro Gold II PQR (panning base with internal clamp) | | 4259 |
| Photo Clam Universal Plates | | | | |
| Universal Plates | PC-52-UP2 | Universal type with hand strap hole | | 225 |
| Universal Plates | PC-59-UP3 | | x | |
| Universal Plates | PC-69-UP3 | Compatible with all camera and 70-200 mm lens | x | 330 |
| Photo Clam Lens Plates | | | | |
| Lens Plates | PC-102-UP | Sizes 70-100mm, 200mm or 300mm | x | 360 |
| Lens Plates | PC-170-UP | Sizes 400mm, 500mm or 600mm | x | 435 |
| Photo Clam Speciality Camera Plates | | | | |
| Speciality Camera Plates | PC-D3-UP | Nikon D3 | x | 330 |

| | | | | | | | | |
|--|-----------------|---|--|--|--|--|---|------|
| Speciality Camera Plates | PC-D300-UP2 | Nikon D300 body | | | | | | 330 |
| Speciality Camera Plates | PC-D300-UP | Nikon D300 / D700Grip | | | | | x | 330 |
| Speciality Camera Plates | PC-D700-UP2 | Nikon D700 Body | | | | | x | 330 |
| Speciality Camera Plates | PC-D70-UP | Nikon D70 Body | | | | | | 330 |
| Speciality Camera Plates | PC-68-UP2 | Nikon D80, D90 Body | | | | | | 330 |
| Speciality Camera Plates | PC-79-UP2 | Nikon D200 / Fuji S5 Pro Body | | | | | | 330 |
| Speciality Camera Plates | PC-69-UP | Nikon D80 / D200 / Fuji S5 Pro Grip | | | | | | 330 |
| Speciality Camera Plates | PC-68-UP | Canon 1D / 1Ds / 1Ds MkII | | | | | | 330 |
| Speciality Camera Plates | PC-M3-UP | Canon 1D MkIII / 1Ds MkIII | | | | | x | 330 |
| Speciality Camera Plates | PC-76-UP | Canon 5D Grip | | | | | | 330 |
| Speciality Camera Plates | PC-76-UP2 | Canon 5D Body | | | | | | 330 |
| Speciality Camera Plates | PC-5DMarkII-UP | Canon 5D MkII Grip | | | | | x | 330 |
| Speciality Camera Plates | PC-5DMarkII-UP2 | Canon 5D MkII Body | | | | | | 330 |
| Speciality Camera Plates | PC-59-UP | Canon 350D / 400D Grip | | | | | | 330 |
| Speciality Camera Plates | PC-59-UP2 | Canon 350D / 400D Body | | | | | | 330 |
| Speciality Camera Plates | PC-75-UP | Canon 10D / 20D / 30D Grip | | | | | | 330 |
| Speciality Camera Plates | PC-78-UP2 | Canon 10D / 20D / 30D Body | | | | | | 330 |
| Photo Clam Quick Release Clamps | | | | | | | | |
| Universal Quick Release Clamps | PC-45N | Monopod Quick Shoe (Release) | | | | | | 375 |
| Universal Quick Release Clamps | PC-59N | Monopod Quick Shoe (Release) | | | | | | 465 |
| Quick Release Clamps | PC-QS-45NS | Quick Release for PC-33, 36, 40 with bubble level | | | | | | 450 |
| Quick Release Clamps | PC-QS-59NS | Quick Release for PC-44, 48, 54 with bubble level | | | | | | 555 |
| Photo Clam Tripods | | | | | | | | |
| Stativ | PT-024 | Tripod | | | | | x | 1950 |
| Stativ | PT-124 | Tripod | | | | | x | 3075 |
| Stativ | PT-125 | Tripod | | | | | x | 3210 |
| Stativ | PT-224 | Tripod | | | | | x | 3540 |
| Stativ | PT-225 | Tripod | | | | | x | 3825 |